

Test Indicator



Dial Test Indicators are designed to the positioned for easy and accurate readability and are applicable for various usages such as measuring dimension, parallelism and centering of work piece and measuring revolution axis of machinery equipment and turnout of work pieces processed by lathe etc., and making table face of machinery equipment parallel. This has strong point if compared with standard dial indicator and has sensitivity for microscopic dimension displacement measurement. As its stylus is leg type with ball edge, narrow space can be measured, where its edge (standard \$2mm ultra hand ball) can enter. φ0.6mm, φ0.8mm and φ1.0mm are available.

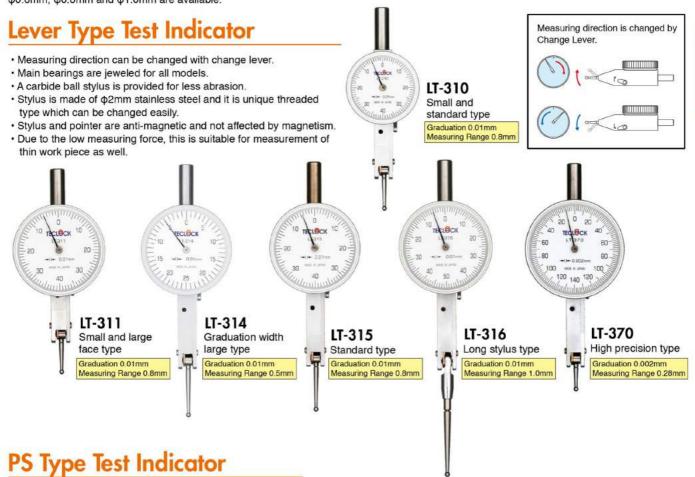

· Shock from the angle excepting measuring direction can be avoided and body is protected by Teclock original shock preventing mechanism (PS mechanism) of center of stylus.

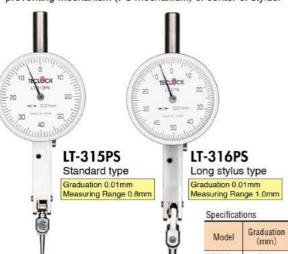


LT-316PS

0.01


1.0

equal to LT-315 and

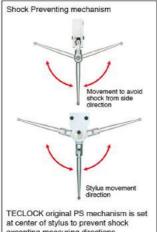

	Stylus movement direction
at center of stylus	I PS mechanism is set to prevent shock ing directions.

0.4 or less

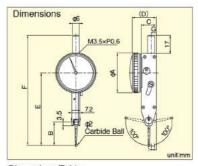

Model	A	В	C	D	E	F	G	H
LT-310	28.4	15.3	14	22.4	47.3	79.3	5	7
LT-311	35	15.3	14	23.3	47.3	79.3	5	7
LT-314	35	21.5	13.5	23	64.5	98.5	4.8	6.8
LT-315	35	20.1	13.5	23	63.1	97.1	4.8	6.8
LT-316	35	42.9	13.5	23	85.9	120	4.8	6.8
LT-370	38.4	12	13.5	23.2	55	89	4.8	6.8

4

ZS-705

10

5

easuring Adjacen Accuracy Dial Measuring Repeatability Hysteresis Standard Weight n full rand Reading (µm) (µm) (µm) (g) (mm) (µm) 0.01 LT-310 0.8 0-40-0 0.4 or less 3 5 8 3 ZS-700 50 LT-311 0.01 0.8 0-40-0 0.4 or less 3 3 5 8 ZS-700 60 0.5 LT-314 0.01 0-25-0 0.4 or less 5 5 3 ZS-701 70 3 LT-315 0.01 0.8 0-40-0 0.4 or less 3 5 8 3 ZS-702 70 LT-316 0.01 1.0 0-50-0 0.4 or less 10 4 ZS-704 70 3 5 LT-370 0.002 0.28 0-140-0 0.4 or less 2 3 2 ZS-713 75 LT-315PS 0.01 0.8 0-40-0 0.4 or less 8 3 ZS-703 70 5


70

0-50-0



Auto-Clutch Test Indicator

- As miniature bearing (pivot ball bearing) is used for stylus revolution bearing. It is not affected by shaft looseness and indication is stable.
- Measuring direction is automatically changed for proper and opposite by auto-clutch mechanism without changing lever. It is always read accurately in any case, as stylus rotates in clockwise direction..
- · Stylus can be set at any desired position of angle of 220 °circle.
- Stem with dovetail groove (Option) can be mounted to 2 points of front and back part.
- A carbide ball stylus is provided for less abrasion and stylus is made of stainless steel..
- · Stylus and pointer are anti-magnetic and not affected by magnetism.

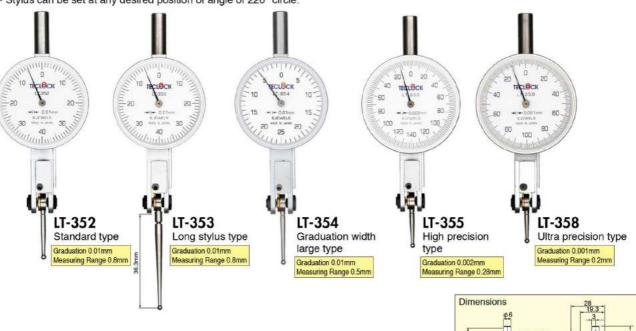

ations

Dimensions Table


Model	Graduation (mm)	Measuring Range (mm)	Dial Reading	Measuring Force	Repeatability (µm)	Adjacent Error (µm)	Accuracy on full range (µm)	Hysteresis (µm)	Standard Stylus	Weight (g)
LT-352	0.01	0.8	0-40-0	0.2 or less	3	5	8	3	ZS-709	75
LT-353	0.01	0.8	0-40-0	0.2 or less	3	5	8	4	ZS-710	75
LT-354	0.01	0.5	0-25-0	0.2 or less	3	5	5	3	ZS-799	75
LT-355	0.002	0.28	0-140-0	0.25 or less	1	2	3	2	ZS-711	75
LT-358	0.001	0.2	0-100-0	0.25 or less	1	2	3	2	ZS-712	75

Dimensi	ons T	able		
Model	A	В	C	D
LT-352	35	21	59	95
LT-353	35	40.6	78.6	114.6
LT-354	35	25.4	63.4	99.4
LT-355	38.4	18	56	92
LT-358	38.4	15	53	89
			unit	: mm

Stems with dovetail slot for Auto-Clutch Test indicator (Option)

Standard stem diameter is 6mm but ϕ 4mm and ϕ 8mm are also available on request






Applicable for LT-352, LT-353, LT-354, LT-355, LT-358

Leveling, parallelism and center run out of work piece are measured by fixing lever test with holder or chuck and moving work piece. Above photo shows that leveling is measured by installing test indicator to electric discharge machine machining center.





Auto-Clutch Test Indicator (Low measuring force)

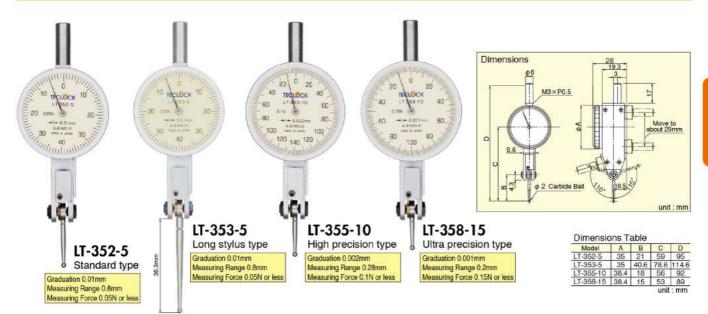


Specifications

Model	Graduation (mm)	Measuring Range (mm)	Dial Reading	Measuring Force	Repeatability (µm)	Adjacent Error (μm)	Accuracy on full range (µm)	Hysteresis (µm)	Standard Stylus	Weight (g)
LT-352-5	0.01	0.8	0-40-0	0.05 or less	3	5	8	3	ZS-709	75
LT-353-5	0.01	0.8	0-40-0	0.05 or less	3	5	8	4	ZS-710	75
LT-355-10	0.002	0.28	0-140-0	0.1 or less	1	2	3	2	ZS-711	75
LT-358-15	0.001	0.2	0-100-0	0.15 or less	1	2	3	2	ZS-712	75



- Deflection which can not be measured with standard type can be checked by installing stylus depending on the shape of work piece.
- Unit is not available for gradation line. (Calibration certificate can not be issued.)
- Standard price of LR-316 does not include stylus.
 Select the stylus from the list below and use indicator by combining it.

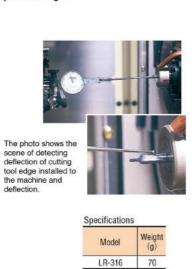



Code No.	Shape of Stylus	L (mm)	Dimensions (mm)
ZS-777	Spherical	25.8	M2×P0.4
ZS-782	Shape	68.7	502
ZS-778	Half	25.8	M2×P0.4
ZS-783	Spherical Shape	68.7	\$ 02
ZS-779	Fan	25.8	M2×P0.4
ZS-784	Shape	68.7	04
ZS-780	Square	25.8	M2× P0.4
ZS-785	Shape	68.7	0.4
ZS-781	Round Bar	25.8	M2×P0.4
ZS-786	Shape	68.7	9



Parts & Accessories

Stylus


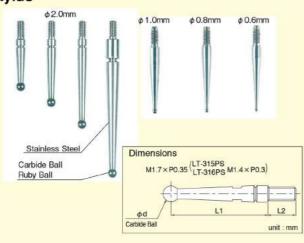



Table for applicable Stylus and Parts


Market	L1	L2			φd(mm)		
Model	(mm)	(mm)	ф0.6	ф0.8	φ1.0	ф2.0 (Standard)	Ф2.0(ルビー球
LT-310	13.30	4.00	ZS-744	ZS-755	ZS-766	ZS-700	ZS-787
LT-311	13.30	4.00	ZS-744	ZS-755	ZS-766	ZS-700	ZS-787
LT-314	19.45	4.00	ZS-745	ZS-756	ZS-767	ZS-701	ZS-788
LT-315	18.10	4.00	ZS-746	ZS-757	ZS-768	ZS-702	ZS-789
LT-316	28.40	4.00	ZS-748	ZS-759	ZS-770	ZS-704	ZS-790
LT-370	10.00	4.00	ZS-754	ZS-765	ZS-776	ZS-713	ZS-795
LT-352	17.80	4.00	ZS-750	ZS-761	ZS-772	ZS-709	ZS-791
LT-353	37.38	4.00	ZS-751	ZS-762	ZS-773	ZS-710	ZS-792
LT-354	22.16	4.00	ZS-811	ZS-812	ZS-813	ZS-799	ZS-815
LT-355	14.80	4.00	ZS-752	ZS-763	ZS-774	ZS-711	ZS-793
LT-358	11.80	4.00	ZS-753	ZS-764	ZS-775	ZS-712	ZS-794
LT-315PS	8.65	1.80	ZS-747	ZS-758	ZS-769	ZS-703	ZS-796
LT-316PS	28.40	1.80	ZS-749	ZS-760	ZS-771	ZS-705	ZS-797

Lever Test Holder

This holder fixes lever test with φ6mm hole or dovetail.

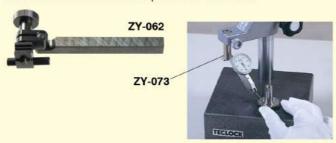

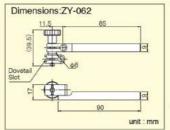




Code No.	Specification
ZY-062	Dovetail slot or φ6mm stem
ZY-073	φ6mm Stem (Setting angle 45°)

Parts List

Test Indicator

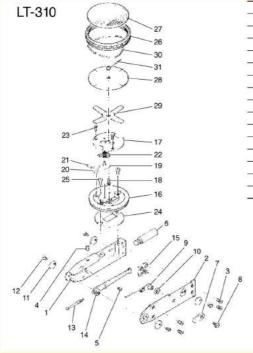

Key No.	Parts No.	Parts name
1	DG-310001	Frame
2	DG-310002	Frame Cover
3	002301	Frame Cover Screw
4	DG-310008	Stop Screw A
5	DG-310009	Stop Screw B
6	ZY-030	Stem
7	DG-310011	Lever
8	DG-310012	Lever Screw
9	DG-310515	Stopper Ass'y
10	DG-310016	Washer
11	DG-310017	Fulcrum Cover
12	001329	Fulcrum Cover Screw
13	ZS-700	Contact Point
14	DG-310522	1# Fulcrum Ass'y
15	DG-310525	Crown Gear Ass'y
16	DG-310031	Base Plate Ass'y

Key No.	Parts No.	Parts name
17	DG-310032	Upper Plate Ass'y
18	DG-310033	Center Pinion
19	DG-310535	2# Gear Ass'y
20	DG-310037	Received Hair Spring
21	DG-310038	Hair Spring Pin
22	DG-310539	Hair Spring
23	002301	Upper Plate Screw
24	DG-310042	Cover
25	001315	Base Plate Screw
26	DG-310045	Bezel
27	DG-310046	Dial Cover
28	T-5400B	Dial Plate
29	DG-310048	Dial Plate Spring
30	DG-310049	Bezel Spring
31	DG-310551	Pointer
-	54 510001	1.01101

Precautions on use of Dial Indicator / Test Indicator



1. Confirmation of performance

Please confirm whether prescribed performance is maintained with implementation of receiving inspection based on purchasers' specifications. Please refer to contents of standard of Dial Indicator JIS B 7503, JIMAS2001, and Dial Test Indicator JIS B 7533 on the occasion of their treatment.

2. Operating environments / storage

- (1) Temperature : 0°Cto 40°C, Relative Humidity : 30% \sim 70% (no condensation)
- (2) Please do not use the indicator with little dust, oil mist and where it will be exposed to direct sunlight.
- (3) Please keep it in good condition that oil mist and dust will not be adhered

3. Usage condition

- (1) Dial Indicator: Please do not suddenly displace spindle and not force perpendicular to the spindle.
- (2) Dial Test Indicator: In case of adding more than enough force to contact point from the excepting contact point direction, its performance will get worse or it will be damaged.

4. Precautions on use

- (1) Check before using
 - 1) Confirm whether operation is smooth.
 - ② Confirm whether quiescent point of indicator (pointer / short hand) is stable.
 - ③ Dial Indicator : Confirm whether contact point and lug back (back lid) are not loose.
 - 4 Dial Test Indicator: Please confirm whether contact point and stem are not loose. Torque for fastening screws of contact point is to be in the range 1.5
 - ~2.0kg·cm. If it is fastened too strong, screw part will be damaged.

(2) Installation method

- ① Dial Indicator should be installed with only stem or lug back. (Dial Test Indicator should be with stem or dovetail)
- ② Holding tool should be sufficiently stiff.
- ③ Whether installation is right or wrong can be confirmed by that the pointer will return to the set position even after contact point of Dial indicator (Test Lever) is touched to measured substance and inner frame (case) is pushed from up and down by finger.
- 4 Angle of Dial Test Indicator contact point Please set contact point to be perpendicular to measuring direction. In case of measuring large angle, please correct it. Otherwise, angle error will occur.
- (3) Suppose dial is read from oblique direction of outer dial, error will happen. Please read from front face.
- (4) In case of changing contact point and back lid of dial indicator, please use only the parts designated by Teclock.
- (5) In case of changing contact point of dial test indicator, please use only the parts designated by Teclock. As to contact point, please use the same length. As to dial test indicator, since expansion mechanism is provided, large error will occur, in case of using contact point of different length.
- (6) In case of using it where temperature changes, please frequently confirm the setting point of pointer with master gauge etc.
- (7) In case of dropping it down or making impact with it, please use it after inspection.

5. Maintenance, inspection and repair

- (1) In case of operation is deteriorated due to dirt of sliding part of spindle, please wipe stains from the spindle by using a dry cloth or a cloth dampened with alcohol.
- (2) In case that outer dial can not be read due to dirt of crystal, please wipe stains from the crystal by using a dry cloth or a cloth dampened with neutral detergent. Please do not use organic solvent like benzine, thinner and alcohol etc.
- (3) The performance of the indicator may deteriorate depending on the operating environment and conditions. Please determine the inspection period according to user's operating frequency, environment, and method and periodically inspect the performance.
- (4) Instruments repaired or disassembled by parties not authorized by TECLOCK can not be warranted by us.

Nomenclature

